


QUIET WALK



2V8BM Installation Instructions Floating Systems

Sub floor must be clean, dry, flat and structurally sound. If relative humidity exceeds flooring manufacturer's guidelines, a 6 mil polythene film (or equivalent) should be used.

- Follow the flooring manufacturer's guidelines for acclimation of the floor covering being installed.
- Roll out the 2V8BM™ leaving a minimum of 1/8" expansion along the walls. Please consult SCI's Technical for larger jobs, as they may require additional expansion. Seams should be butted tight to ensure no gapping (taping the seam is optional).
- Always try to run 2V8BM™ perpendicular to the plank floor covering. For LVT tile, 2V8BM™ should be run on a 45 degree angle.

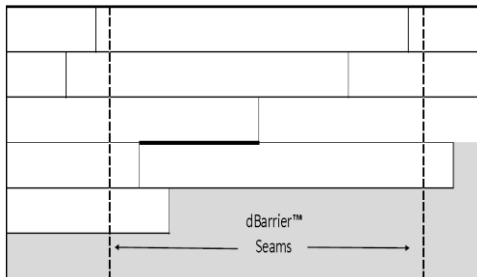

- Follow the flooring manufacturer's guidelines for installation of their specific flooring type.

***2V8BM™ also suitable for nail/staple down applications for engineered and solid hardwood flooring.**

2V8BM Installation Instructions Double Glue System

Sub floor must be clean, dry, flat and structurally sound. Always follow the adhesive and flooring manufacturer's guidelines for moisture limits on their specific flooring type.

- Always follow the flooring manufacturer's guidelines for acclimation of the floor covering being installed.
- The use of a pressure-sensitive adhesive, applied with a 1/16" width x 1/32" depth x 1/32" spacing notched trowel to ensure evenness of the application, is suggested for attaching cushion to the floor. Follow the adhesive manufacturer's guidelines and recommendations for installation.
- After the adhesive sets up, roll out the dBarrier™ leaving a minimum of 1/8" expansion along the walls. Please consult SCI's Technical for larger jobs and specific floor types, as they may require additional expansion. Seams should be butted tight to ensure no gapping.
- Roll the 2V8BM™ with a maximum 50 lb. roller at a 45 degree angle to ensure proper adhesion.
- Always try to run 2V8BM™ perpendicular to the plank floor covering. For LVT tile, 2V8BM™ should be run on a 45 degree angle.
- Follow the flooring and adhesive manufacturers guide lines for installation of their specific product type.


QUIET WALK

“ Quiet Walk™ “ Installation Instructions Single Glue System

1. Sub floor must be clean, dry, flat and structurally sound. If relative humidity exceeds flooring manufacturer’s guidelines, a 6 mil polythene film (or equivalent) should be used.
2. Follow the flooring manufacturer’s guidelines for acclimation of the floor covering being installed.
3. Roll out the Quiet Walk™ leaving a minimum of 1/8” expansion along the walls. Please consult SCI’s Technical for larger jobs, as they may require additional expansion. Seams should be butted tight to ensure no gapping. Tape Quiet Walk™ together with a 2” wide clear packing tape (do not use thick tapes that might telegraph through).
4. Always try to run Quiet Walk™ perpendicular to the plank floor covering. For LVT tile, Quiet Walk™ should be run on a 45 degree angle.

Adhesives suitable for use with Quiet Walk installations can be obtained from a wide range of manufacturers. SCI does not recommend any individual adhesive or specific adhesive manufacturer. Each manufacturer has its own specific warranties and recommendations for using their product with Quiet Walk. SCI strongly urges you to consult the manufacturer of your choice for their warranties, recommended products and installation instructions. The following list of manufacturers is intended only to provide information on how to contact these manufacturers for assistance, and is not meant to be all-inclusive.

BOSTIK	800-726-7845	ROBERTS / QEP	800-423-6545
CAPITOL	888-875-5087	W. F. TAYLOR (E)	800-868-4583
HP FULLER	800-621-0220	W. F. TAYLOR (W)	800-397-4583
MAPEI	800-992-6273	W. W. HENRY	888-512-7339
ROYAL	800-763-7272	AAT	800-228-4583
TEC	800-832-9002	Schonox	855-391-2649

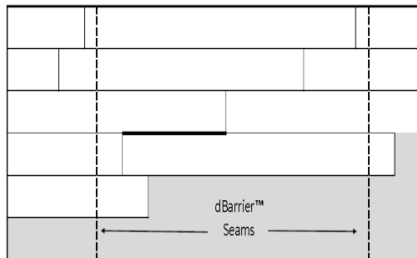

5. Follow the flooring and adhesive manufacturers guide lines for installation of their specific product type.